

## 2-In-1 Heatpipe CPU Cooler


### For Socket 775 Installation



1. Place socket 775 back plate to the back of motherboard.




2. Apply a thin layer of thermal compound on the bottom of heatsink.

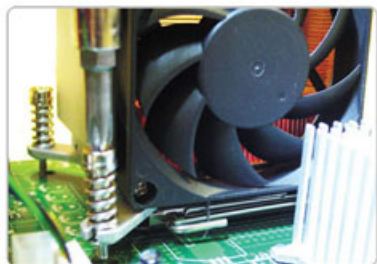

3. Tighten all four screws and finish socket 775 installation.

### For AMD K8 Replacement

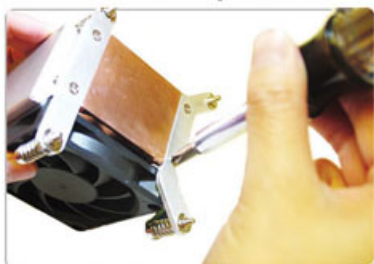

1. To unscrew and remove the Socket 775 mounting holder.



2. Place the AMD K8 mounting holder and tighten the screws.



3. Finish the replacement.